

MITSUBISHI

Mitsubishi Safety Programmable Controller

MELSEC **QS** series

CC-Link Safety System Remote I/O Module

User's Manual
(Hardware)

QS0J65BTS2-8D

Thank you for purchasing the Mitsubishi safety programmable controller MELSEC-QS Series.

Prior to use, please read both this manual and detailed manual thoroughly and familiarize yourself with the product.



MODEL	QS0J65BTS2-8D-U-HW
MODEL CODE	13JY66
IB(NA)-0800414-A(0804)MEE	

● SAFETY PRECAUTIONS ●

(Always read these instructions before using this product.)

Before using the product, please read this manual, the relevant manuals introduced in this manual, standard PLC manuals, and the safety standards carefully and pay full attention to safety to handle the product correctly. This manual contains precautions for this product only. For the safety instructions of the programmable controller system, please read the user's manual of the CPU module to use.

In this manual, the safety precautions are ranked as "DANGER" and "CAUTION".




DANGER

Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



CAUTION

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or minor injury or physical damage.

Note that failure to observe the  **CAUTION** level instructions may also lead to a serious consequence depending on the circumstances.

Be sure to observe the instructions of both levels to ensure the safety.

Please keep this manual in a safe place for future reference and also pass this on to the end user.

[Design Precautions]

DANGER

- When a safety PLC detects an error in an external power supply or a failure in PLC main module, it turns off all the outputs.
Create an external circuit to securely stop the power of hazard by turning off the outputs. Incorrect configuration may result in an accident.
- Create short current protection for a safety relay, and a protection circuit such as a fuse, and breaker, outside a safety PLC.
- If load current more than the rating or overcurrent due to a short circuit in the load has flowed in the CC-Link Safety remote I/O module, the module defines it as a fault and turns off all the outputs.
However, if overcurrent flows in the CC-Link Safety remote I/O module for a long time, it may cause smoke or a fire. To prevent it, create a safety circuit such as a fuse outside the module.
- When a safety remote I/O module has detected CC-Link Safety error, it turns off all the outputs.
Note that the outputs in a sequence program are not automatically turned off. If CC-Link Safety error has been detected, create a sequence program that turns off the outputs in the program.
If the CC-Link Safety is restored with the outputs on, it may suddenly operate and result in an accident.
- To inhibit restart without manual operation after safety functions was performed and outputs were turned OFF, create an interlock program which uses a reset button for restart.

CAUTION

- Do not bunch the wires of external devices or communication cables together with the main circuit or power lines, or install them close to each other. They should be installed 100 mm (3.94 inch) or more from each other. Not doing so could result in noise that would cause malfunctions.
- Select the external devices to be connected to the CC-Link Safety remote I/O module, considering the maximum inrush current with reference to the CC-Link Safety System Remote I/O Module User's Manual.

[Installation Precautions]

CAUTION

- Use a safety PLC in the environment that meets the general specifications described in the QSCPU User's Manual (Hardware Design, Maintenance and Inspection).
Using this PLC in an environment outside the range of the general specifications could result in electric shock, fire, erroneous operation, and damage to or deterioration of the product.
- Make sure to fix the CC-Link Safety remote I/O module with a DIN rail or mounting screws and tighten the screws with the specified torque.
If the screws are too loose, it may cause a drop of the screw or module.
Over tightening may cause a drop due to the damage of the screw or module.
- Do not directly touch the module's conductive parts or electronic components.
Doing so may cause malfunctions or a failure.

[Wiring Precautions]

DANGER

- Be sure to shut off all phases of the external supply power used by the system before wiring. Not completely turning off all power could result in electric shock or damage to the product.
- When energizing or operating the module after installation or wiring, be sure to close the attached terminal cover. Not doing so may result in electric shock.

[Wiring Precautions]

CAUTION

- Ground the FG and LG terminals correctly.
Not doing so could result in electric shock or malfunctions.
- Wire the module correctly after confirming the rated voltage and terminal layout. Connecting a power supply of a different rated voltage or incorrect wiring may cause a fire or failure.
- Tighten a terminal block mounting screw, terminal screw, and module mounting screw within the specified torque range. If the terminal block mounting screw or terminal screw is too loose, it may cause a short circuit, fire, or malfunctions. If too tight, it may damage the screw and/or the module, resulting in a drop of the screw or module, a short circuit or malfunctions. If the module mounting screw is too loose, it may cause a drop of the screw or module. Over tightening the screw may cause a drop due to the damage of the screw or module.
- Be sure there are no foreign substances such as sawdust or wiring debris inside the module.
Such debris could cause a fire, failure, or malfunctions.
- Be sure to fix the communication cables or power cables by ducts or clamps when connecting them to the module.
Failure to do so may cause damage of the module or cables due to a wobble, unintentional shifting, or accidental pull of the cables, or malfunctions due to poor contact of the cable.
- When removing the connected communication cables or power cables, do not pull the cable with grasping the cable part.
Remove the cable connected to the terminal block after loosening the terminal block screws.
Pulling the cable connected to a module may result in malfunctions or damage of the module or cable.

[Startup and Maintenance Precautions]

DANGER

- Do not touch the terminals while power is on.
Doing so could result in electric shock.
- Turn off all phases of the external supply power used in the system when cleaning the module or retightening the terminal block mounting screws, terminal screws, or module mounting screws.
Not doing so could result in electric shock. Tighten a terminal block mounting screw, terminal screw, and module mounting screw within the specified torque range. If the terminal block mounting screw or terminal screw is too loose, it may cause a short circuit, fire, or malfunctions. If too tight, it may damage the screw and/or the module, resulting in a drop of the screw or module, a short circuit or malfunctions. If the module mounting screw is too loose, it may cause a drop of the screw or module. Over tightening the screw may cause a drop due to the damage of the screw or module.

CAUTION

- Do not disassemble or modify the modules.
Doing so could cause a failure, malfunctions, injury, or fire.
If the product is repaired or remodeled by other than the specified FA centers or us, the warranty is not covered.
- Restrict the mounting/removal of a module, base unit, and terminal block up to 50 times (IEC61131-2-compliant), after the first use of the product.
Failure to do so may cause the module to malfunction due to poor contact of connector.
- Since the module case is made of resin, do not drop or apply any strong impact to the module. Doing so may damage the module.
- Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel.
Not doing so may result in a failure or malfunctions of the module.

[Installation Precautions]

CAUTION

- When disposing of this product, treat it as industrial waste.

Revisions

* The manual number is noted at the lower left of the back cover.

Print Date	*Manual Number	Revision
Apr., 2008	IB(NA)-0800414-A	First printing

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

CONTENTS

1. Overview	1
2. Specifications	2
2.1 General Specifications	2
2.2 Performance Specifications	3
2.3 Cable Specifications	5
2.4 Confirming Production Information	5
3. Part Names and Settings	6
4. Mounting and Installation	9
4.1 Handling Precautions	9
4.2 Installation Environment	11
5. Wiring	12
5.1 Precautions for Handling CC-Link Cables	12
5.2 Connecting CC-Link Cables	12
5.3 Precautions for Wiring Module Power Supply	13
5.4 Precautions for Wiring Safety Devices	13
6. External Dimensions	14

About Manual

The following manual is also related to this product.
Please order if necessary.

Detailed Manual

Manual name	Manual No. (Model code)
CC-Link Safety System Remote I/O Module User's Manual	SH-080612ENG (13JR89)

Conformance to the EMC and Low Voltage Directives

When incorporating the Mitsubishi PLC compliant with the EMC and Low Voltage Directives into other industrial machinery and ensuring compliance with the directives, refer to Chapter 3 "EMC and Low Voltage Directives" of the QSCPU User's Manual (Hardware).

The CE logo is printed on the rating plate of the module, indicating compliance with the directives.

To conform this product to the EMC and Low Voltage Directives, refer to the QSCPU User's Manual (Hardware), "CC-Link module" in Chapter 3 "EMC and Low Voltage Directives".

1. Overview

This manual explains the specifications and handling and wiring methods of the safety remote I/O module for the CC-Link Safety System.

After unpacking, confirm that the following are included.

Item	Quantity
QS0J65BTS2-8D	1
CC-Link Safety System Remote I/O Module User's Manual (Hardware)QS0J65BTS2-8D	1

2. Specifications

2.1 General Specifications

The general specifications of the QS0J65BTS2-8D are shown below.

Item	Specification					
Operating ambient temperature	0 to 55°C					
Storage ambient temperature	-40 to 75°C					
Operating ambient humidity	5 to 95%RH, non-condensing					
Storage ambient humidity	5 to 95%RH, non-condensing					
Vibration resistance	Conforming to JIS B 3502, IEC 61131-2		Frequency range	Constant acceleration	Half amplitude	Sweep count
		Under intermittent vibration	5 to 9Hz	----	3.5mm (0.14inch)	10 times each in X, Y, Z directions
			9 to 150Hz	9.8m/s ²	----	
		Under continuous vibration	5 to 9Hz	----	1.75mm (0.07inch)	
			9 to 150Hz	4.9m/s ²	----	
Shock resistance	Conforming to JIS B 3502, IEC 61131-2 (147 m/s ² , duration of action 11ms, three times in X, Y, Z directions respectively by sine half-wave pulse)					
Operating ambience	No corrosive gas					
Operating altitude *3	2000 m (6562 ft.) or less					
Installation area	Within a control panel					
Overvoltage category *1	II or lower					
Pollution degree *2	2 or lower					
Equipment category	Class III					

*1: This indicates the section of the power supply to which the equipment is assumed to be connected between the public electrical power distribution network and the machinery within premises. Category II applies to equipment for which electrical power is supplied from fixed facilities. The surge voltage withstand level for up to the rated voltage of 300 V is 2500 V.

*2: This index indicates the degree to which conductive material can be generated in terms of the environment where the equipment is used. In the environment corresponding to "Pollution level 2", basically only non-conductive pollution occurs, however temporary conductivity may occur due to occasional condensation.

*3 Do not operate or store the PLC in the environment where the pressure applied is equal to or greater than the atmospheric pressure at the altitude of 0m. Doing so may cause a malfunction. Please consult our branch office for more information.

2.2 Performance Specifications

The performance specifications of the QS0J65BTS2-8D are shown below.

Item		DC input module
		QS0J65BTS2-8D
No. of input points		8 points (Input terminals: 16 points ^{*2})
Isolation method		Photocoupler
Rated input voltage		24V DC
Rated input current		Approx. 5.9mA
Operating voltage range		19.2V to 28.8V DC (Ripple ratio: 5% or less)
Maximum number of simultaneous input points		100%
ON voltage/ON current		15V DC/2mA or more
OFF voltage/OFF current		5V DC/0.5mA or less
Input resistance		Approx. 4.3k Ω
Input type		Negative common (source type)
Response time	OFF \rightarrow ON	0.4ms or less (at 24V DC)
	ON \rightarrow OFF	0.4ms or less (at 24V DC)
Safety remote station input response time		11.2ms or less + time of noise removal filter (1ms, 5ms, 10ms, 20ms, 50ms)
External power supply	Voltage	19.2V to 28.8V DC (Ripple ratio: 5% or less)
	Current	40mA (24VDC, with all points ON, excepting for external load current)
	Protection function	External power supply overvoltage/overcurrent protection function
	Fuse	8A (Not replaceable)
Wiring method for common		16 input points per common (Spring clamp terminal block 2-wire type)
Number of occupied stations		1 station
Number of accesses to nonvolatile memory inside module		10^{12} times
Safety refresh response processing time		9.6ms
Module power supply ^{*1}	Voltage	19.2V to 28.8V DC (Ripple ratio: 5% or less)
	Current	120mA or less (24V DC, with all points ON)
	Protection function	Module power supply overvoltage/overcurrent protection function
	Fuse	0.8A (Not replaceable)
	Momentary power failure period	10ms or less
Noise immunity		Tested by a DC-type noise simulator with noise voltage of 500Vp-p, noise width of 1 μ s and frequency of 25 to 60Hz.
Dielectric withstand voltage		500V AC between all external DC terminals and ground, for 1 minute

Item		DC input module
		QS0J65BTS2-8D
Insulation resistance		10M Ω or more between all external DC terminals and ground, by a 500VDC insulation resistance tester
Level of protection		IP2X
Weight		0.46kg
External connection system	Communication section, module power supply section	7-point detachable terminal block [Transmission circuits, module power, FG] M3 x 5.2 Tightening torque: 0.425 to 0.575N·m, 2 solderless terminals or less
	External power supply section, input section	Two-piece spring clamp terminal block [External power supply, input signal]
Module fixing screw		M4 screw with polished and round flat washer (Tightening torque: 0.824 to 1.11N·m) Mountable with a DIN rail, and in 6 orientations.
Applicable DIN rail		TH35-7.5Fe, TH35-7.5Al (Compliant with JIS C 2812)
Applicable wire size	Communication section, module power supply section	0.3 to 2.0mm ²
	Applicable solderless terminal	<ul style="list-style-type: none"> • RAV1.25-3 (Compliant with JIS C 2805) [Applicable wire size: 0.3 to 1.25mm²] • V2-MS3 (JST Mfg. Co., Ltd.), RAP2-3SL (Nippon Tanshi Co., Ltd.), TGV2-3N (Nichifu) [Applicable wire size: 1.25 to 2mm²]
	External power supply section, input section	Twisted wire 0.08 to 1.5mm ² (AWG28 to 16) *3 Applicable wire strip length: 8 to 11mm
	Applicable solderless terminal	<ul style="list-style-type: none"> • TE0.5 (Nichifu) [Applicable wire size: 0.5mm²] • TE0.75 (Nichifu) [Applicable wire size: 0.75mm²] • TE1 (Nichifu) [Applicable wire size: 0.9 to 1.0mm²] • TE1.5 (Nichifu) [Applicable wire size: 1.25 to 1.5mm²] • FA-VTC125T9 (Mitsubishi Electric Engineering Co.,Ltd. [Applicable wire size: 0.3 to 1.65mm²] • FA-VTCW125T9 (Mitsubishi Electric Engineering Co.,Ltd. [Applicable wire size: 0.3 to 1.65mm²]

*1 The power supply connected to the QS0J65BTS2-8D must satisfy the following conditions:

(1) Reinforced insulation

SELV (Safety Extra Low Voltage): Hazardous potential part (48V or more)

(2) Compliance with the LVD (Low Voltage Directive)

(3) Output voltage within 19.2V to 28.8V DC

(Ripple ratio: 5% or less.)

*2 Two inputs terminals are assigned for each input since redundant wiring is supported.

*3 Do not insert two or more wires into one terminal.

2.3 Cable Specifications

Use dedicated CC-Link cables for the CC-Link Safety System.

The performance of the CC-Link Safety System cannot be guaranteed when any other cables are used.

For the specifications or any other inquiries, visit the following website:


CC-Link Partner Association: <http://www.cc-link.org/>

Remarks

For details, refer to the CC-Link Cable Wiring Manual issued by the CC-Link Partner Association.


2.4 Confirming Production Information

The production information of the QS0J65BTS2-8D can be confirmed on the rating plate on the side face of the module.

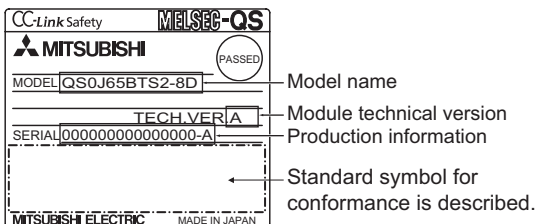



3. Part Names and Settings

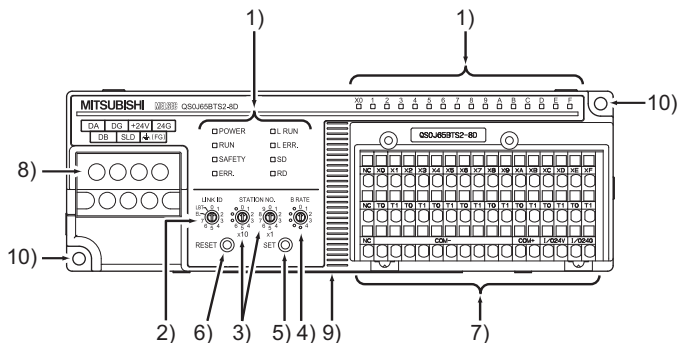The name of each part in the QS0J65BTS2-8D is shown.



No.	Name	Description																				
1)	Indicator LEDs	<table><tr><th>LED name</th><th>Indication</th></tr><tr><td>"POWER"</td><td>Indicates the power status of the safety remote I/O module. ON (green) : Normally powered OFF : Powered off or error occurred (blown fuse)</td></tr><tr><td>"RUN"*1</td><td>Indicates the operating status of the safety remote I/O module. ON (green) : Normally operating, or moderate error occurred Flash (green): Saving switch setting OFF : Serious error occurred</td></tr><tr><td>"SAFETY"*1</td><td>Indicates the CC-Link Safety System connection status of the safety remote I/O module. ON (green) : Connected to CC-Link Safety System*2, or self-loopback test completed normally Flash (green):Self-loopback test in execution OFF : Not connected to CC-Link Safety System, or self-loopback test completed in error</td></tr><tr><td>"ERR."*1</td><td>Indicates failure or error status of the safety remote I/O module. ON (red) : Serious error occurred, or self-loopback test completed in error "RUN" LED OFF: Serious error occurred Flash (red) : Moderate error occurred OFF : Normally operating</td></tr><tr><td>"L RUN"</td><td>Indicates the communication status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Normally communicating in the CC-Link Safety System OFF : Communication failure in the CC-Link Safety System (Timeout error)</td></tr><tr><td>"L ERR."</td><td>Indicates the communication error status of the safety remote I/O module in the CC-Link Safety System. ON (red) : Value set by Link ID, Station No, or Transmission setting switch is out of range Flash regularly (red) : Setting of Link ID, Station No, and/or Transmission setting switch is different from that of the internal nonvolatile memory Flash irregularly (red) : Wrong terminal resistor setting, or noise influence OFF : Normally operating</td></tr><tr><td>"SD"</td><td>Indicates the sending status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Data being sent</td></tr><tr><td>"RD"</td><td>Indicates the receiving status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Data being received</td></tr><tr><td>"X0" to "XF"</td><td>Indicates the Input status of the safety remote I/O module. ON (red) : Input ON OFF : Input OFF</td></tr></table>	LED name	Indication	"POWER"	Indicates the power status of the safety remote I/O module. ON (green) : Normally powered OFF : Powered off or error occurred (blown fuse)	"RUN"*1	Indicates the operating status of the safety remote I/O module. ON (green) : Normally operating, or moderate error occurred Flash (green): Saving switch setting OFF : Serious error occurred	"SAFETY"*1	Indicates the CC-Link Safety System connection status of the safety remote I/O module. ON (green) : Connected to CC-Link Safety System*2, or self-loopback test completed normally Flash (green):Self-loopback test in execution OFF : Not connected to CC-Link Safety System, or self-loopback test completed in error	"ERR."*1	Indicates failure or error status of the safety remote I/O module. ON (red) : Serious error occurred, or self-loopback test completed in error "RUN" LED OFF: Serious error occurred Flash (red) : Moderate error occurred OFF : Normally operating	"L RUN"	Indicates the communication status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Normally communicating in the CC-Link Safety System OFF : Communication failure in the CC-Link Safety System (Timeout error)	"L ERR."	Indicates the communication error status of the safety remote I/O module in the CC-Link Safety System. ON (red) : Value set by Link ID, Station No, or Transmission setting switch is out of range Flash regularly (red) : Setting of Link ID, Station No, and/or Transmission setting switch is different from that of the internal nonvolatile memory Flash irregularly (red) : Wrong terminal resistor setting, or noise influence OFF : Normally operating	"SD"	Indicates the sending status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Data being sent	"RD"	Indicates the receiving status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Data being received	"X0" to "XF"	Indicates the Input status of the safety remote I/O module. ON (red) : Input ON OFF : Input OFF
	LED name	Indication																				
	"POWER"	Indicates the power status of the safety remote I/O module. ON (green) : Normally powered OFF : Powered off or error occurred (blown fuse)																				
	"RUN"*1	Indicates the operating status of the safety remote I/O module. ON (green) : Normally operating, or moderate error occurred Flash (green): Saving switch setting OFF : Serious error occurred																				
	"SAFETY"*1	Indicates the CC-Link Safety System connection status of the safety remote I/O module. ON (green) : Connected to CC-Link Safety System*2, or self-loopback test completed normally Flash (green):Self-loopback test in execution OFF : Not connected to CC-Link Safety System, or self-loopback test completed in error																				
	"ERR."*1	Indicates failure or error status of the safety remote I/O module. ON (red) : Serious error occurred, or self-loopback test completed in error "RUN" LED OFF: Serious error occurred Flash (red) : Moderate error occurred OFF : Normally operating																				
	"L RUN"	Indicates the communication status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Normally communicating in the CC-Link Safety System OFF : Communication failure in the CC-Link Safety System (Timeout error)																				
	"L ERR."	Indicates the communication error status of the safety remote I/O module in the CC-Link Safety System. ON (red) : Value set by Link ID, Station No, or Transmission setting switch is out of range Flash regularly (red) : Setting of Link ID, Station No, and/or Transmission setting switch is different from that of the internal nonvolatile memory Flash irregularly (red) : Wrong terminal resistor setting, or noise influence OFF : Normally operating																				
	"SD"	Indicates the sending status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Data being sent																				
	"RD"	Indicates the receiving status of the safety remote I/O module in the CC-Link Safety System. ON (green) : Data being received																				
"X0" to "XF"	Indicates the Input status of the safety remote I/O module. ON (red) : Input ON OFF : Input OFF																					

No.	Name	Description												
2)	Link ID setting switch ^{*4}	<table><tr><th>Setting</th><th>Description</th></tr><tr><td>0 to 7</td><td>Link ID setting</td></tr><tr><td>EL</td><td>Setting for reading error logs</td></tr><tr><td>LBT</td><td>Setting for self-loopback test</td></tr></table> <p>To update the changed switch setting, reset or power OFF and ON the safety remote I/O module.</p>	Setting	Description	0 to 7	Link ID setting	EL	Setting for reading error logs	LBT	Setting for self-loopback test				
Setting	Description													
0 to 7	Link ID setting													
EL	Setting for reading error logs													
LBT	Setting for self-loopback test													
3)	Station No. setting switch ^{*4}	Set station No. of the safety remote I/O module within a range from 0 to 64. ^{*3} • Tens place of station No. is set by  X10. • Units place of station No. is set by  X1.												
4)	Transmission speed setting switch ^{*4}	<table><tr><th>Setting</th><th>Transmission speed</th></tr><tr><td>0</td><td>156kbps</td></tr><tr><td>1</td><td>625kbps</td></tr><tr><td>2</td><td>2.5Mbps</td></tr><tr><td>3</td><td>5Mbps</td></tr><tr><td>4</td><td>10Mbps</td></tr></table> <p>Always set this switch within a range of 0 to 4.</p>	Setting	Transmission speed	0	156kbps	1	625kbps	2	2.5Mbps	3	5Mbps	4	10Mbps
Setting	Transmission speed													
0	156kbps													
1	625kbps													
2	2.5Mbps													
3	5Mbps													
4	10Mbps													
5)	Setting saving switch ^{*4}	Saves the values set by switches 2) to 4) into the nonvolatile memory inside the safety remote I/O module.												
6)	Reset switch ^{*4}	Resets the hardware of the safety remote I/O module.												
7)	I/O terminal block	Two-piece spring clamp terminal block for connection of external power supply and I/O signals.												
8)	Power supply, transmission terminal block	Two-piece terminal block for connection of module power supply and transmission signal.												
9)	Hook for DIN rail	Hook used for installing the module to a DIN rail. Press the center part of the hook until a click is heard.												
10)	Fixing hole for screw installation	A hole used when installing a module directly to a panel.												

*1 Although the "RUN", "SAFETY" and "ERR." LEDs momentarily turn on immediately after power ON or reset, it does not mean any fault.

*2 The "SAFETY" LED is off when no safety remote I/O station parameters have been received during connection to the CC-Link Safety System.

*3 Duplicate station number setting is not allowed.

*4 For the switch setting methods, refer to the CC-Link Safety System Remote I/O Module User's Manual.

4. Mounting and Installation

4.1 Handling Precautions

This section provides handling precautions for use of the safety remote I/O module.



DANGER

- Do not touch the terminals while power is on.
Doing so could cause shock or erroneous operation.



CAUTION

- Be sure there are no foreign substances such as sawdust or wiring debris inside the module.
Such debris could cause fires, damage, or erroneous operation.
- Do not disassemble or modify the modules.
Doing so could cause trouble, erroneous operation, injury, or fire.
If the product is repaired or remodeled by other than the specified FA centers or us, the warranty is not covered.
- Do not directly touch the module's conductive parts or electronic components. Touching the conductive parts could cause an operation failure or give damage to the module.
- Since the module case is made of resin, do not drop or apply any strong impact to the module.
Doing so may damage the module.
- Tighten a terminal block mounting screw, terminal screw, and module mounting screw within the specified torque range. If the terminal block mounting screw or terminal screw is too loose, it may cause a short circuit, fire, or malfunctions.
If too tight, it may damage the screw and/or the module, resulting in a drop of the screw or module, a short circuit or malfunctions.
If the module mounting screw is too loose, it may cause a drop of the screw or module.
Over tightening the screw may cause a drop due to the damage of the screw or module.
- When disposing of this product, treat it as industrial waste.




CAUTION

- Make sure to fix a CC-Link Safety remote I/O module with a DIN rail or mounting screws and tighten the screws with the specified torque.
If the screws are too loose, it may cause a drop of the screw or module.
Over tightening may cause a drop due to the damage of the screw or module.
- Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel.
Not doing so may result in a fault or malfunctions of the module.


- (1) Do not drop the safety remote I/O module or apply any strong impact to it.
- (2) Do not remove the printed circuit board (PCB) of the safety remote I/O module from the case.
Doing so may cause failure.
- (3) Carefully prevent any dust or wiring chips from entering the safety remote I/O module.
Failure to do so may cause a fire, failure, or malfunction.
- (4) When installing the safety remote I/O module to a control panel, provide clearance of at least 60mm between the module's top/bottom and any other structure or component to ensure proper airflow and to make module replacement easy.
- (5) Install the safety remote I/O module to a flat surface.
If it is not flat, an excess force may be applied to the PCB, causing failure.
- (6) Tighten the module fixing screws and terminal block screws within the following torque range.
Overtightening may result in damage to the screws or the module case.

Screw	Specified torque range
Module fixing screw (M4 screw with polished and round flat washer)	0.824 to 1.110N·m
Terminal block screw (M3 screw)	0.425 to 0.525N·m
2-piece terminal block screw (M3.5 screw)	0.680 to 0.920N·m

- (7) When using a DIN rail, pay attention to the following:
- (a) Applicable DIN rail model (conforming to JIS C 2812)
TH35-7.5Fe
TH35-7.5Al
 - (b) Installation screw intervals
Tighten the screws at pitches of 200mm (7.88 inch) or less.
- (8) When installing the safety remote I/O module to the DIN rail, press the center part of the hook located on the bottom of the module until a click is heard.

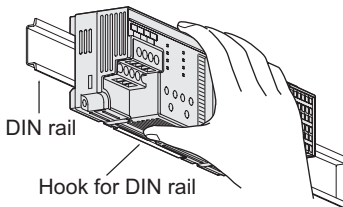

Note: Do not press the front face as shown below. Doing so may cause failure.

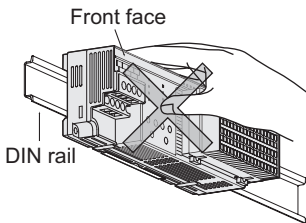

- (9) If the mechanical power supply switch is used for the safety remote I/O module, in rare cases it does not operate, when the excessive chattering is generated at power-on, and safety diagnostics function operates due to the unstable status of the input power supply voltage.
- In this case, turn on power supply again.

4.2 Installation Environment

For installation environment, refer to "2.1 General Specifications".

5. Wiring


5.1 Precautions for Handling CC-Link Cables

This section explains how to handle dedicated CC-Link cables. Do not perform any of the following, as each of them will damage CC-Link cables:

- Compressing the cable with a sharp object
- Twisting the cable excessively
- Pulling the cable too hard (exceeding the allowable tension)
- Stepping on the cable
- Placing an object on the cable
- Scratching the cable sheath

5.2 Connecting CC-Link Cables

The following figure shows how safety remote I/O modules are connected with dedicated CC-Link cables.

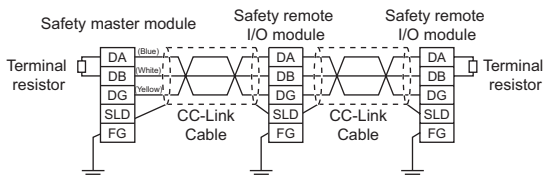

POINT

- 1) Connect the shielded wire of the CC-Link cable to SLD terminal of each module, and ground both ends to the protective ground connectors via FG terminals.
The SLD and FG terminals are connected inside the module.
- 2) Always connect terminal resistors to the modules located on both ends of the data link network.
Connect a terminating resistor between DA and DB terminals.

5.3 Precautions for Wiring Module Power Supply

When wiring the module power supply of the safety remote I/O module, note the following.

- Cable length of the module power supply must be within 10m

5.4 Precautions for Wiring Safety Devices



This section describes precautions for wiring to each safety device.

(1) Wiring of the input terminal section

(a) Combinations of input terminals



Input terminals can be used in the following combinations only.
Using them in any other combination will result in a medium failure.

- | | | | |
|-------------|-------------|-------------|-------------|
| • X0 and X1 | • X2 and X3 | • X4 and X5 | • X6 and X7 |
| • X8 and X9 | • XA and XB | • XC and XD | • XE and XF |

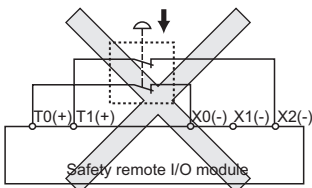
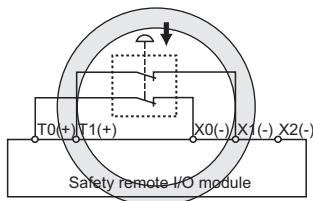


(b) Combinations of the test pulse output terminals

Using the same test pulse for one device is not allowed.
If the same test pulse is used in combinations such as X0 + T0 and X1 + T0, a medium failure will occur.

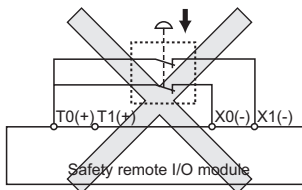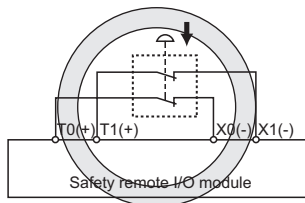

6. External Dimensions

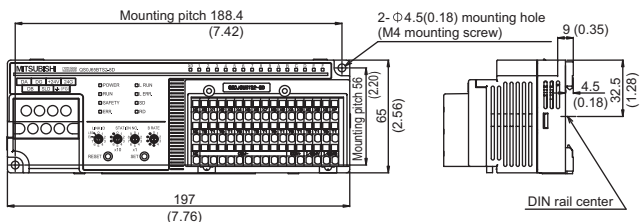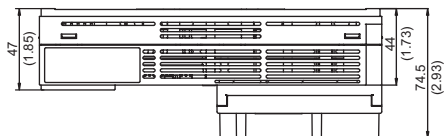

Unit: mm (inch)

WARRANTY

Please confirm the following product warranty details before using this product.

1. Limited Warranty and Product Support.

- a. Mitsubishi Electric Company ("MELCO") warrants that for a period of forty two(42) months after date of delivery from the point of manufacture or three(3) years from date of Customer's purchase, whichever is less, Mitsubishi MELSEC Safety programmable controllers (the "Products") will be free from defects in material and workmanship.
- b. At MELCO's option, for those Products MELCO determines are not as warranted, MELCO shall either repair or replace them or issue a credit or return the purchase price paid for them.
- c. For this warranty to apply:
 - (1) Customer shall give MELCO (i) notice of a warranty claim to MELCO and the authorized dealer or distributor from whom the Products were purchased, (ii) the notice shall describe in reasonable details the warranty problem, (iii) the notice shall be provided promptly and in no event later than thirty (30) days after the Customer knows or has reason to believe that Products are not as warranted, and (iv) in any event, the notice must be given within the warranty period;
 - (2) Customer shall cooperate with MELCO and MELCO's representatives in MELCO's investigation of the warranty claim, including preserving evidence of the claim and its causes, meaningfully responding to MELCO's questions and investigation of the problem, grant MELCO access to witnesses, personnel, documents, physical evidence and records concerning the warranty problem, and allow MELCO to examine and test the Products in question offsite or at the premises where they are installed or used; and
 - (3) If MELCO requests, Customer shall remove Products it claims are defective and ship them to MELCO or MELCO's authorized representative for examination and, if found defective, for repair or replacement. The costs of removal, shipment to and from MELCO's designated examination point, and reinstallation of repaired or replaced Products shall be at Customer's expense.
 - (4) If Customer requests and MELCO agrees to effect repairs onsite at any domestic or overseas location, the Customer will pay for the costs of sending repair personnel and shipping parts. MELCO is not responsible for any re-commissioning, maintenance, or testing on-site that involves repairs or replacing of the Products.
- d. Repairs of Products located outside of Japan are accepted by MELCO's local authorized service facility centers ("FA Centers"). Terms and conditions on which each FA Center offers repair services for Products that are out of warranty or not covered by MELCO's limited warranty may vary.
- e. Subject to availability of spare parts, MELCO will offer Product repair services for (7) years after each Product model or line is discontinued, at MELCO's or its FA Centers' rates and charges and standard terms in effect at the time of repair. MELCO usually produces and retains sufficient spare parts for repairs of its Products for a period of seven (7) years after production is discontinued.
- f. MELCO generally announces discontinuation of Products through MELCO's Technical Bulletins. Products discontinued and repair parts for them may not be available after their production is discontinued.

2. Limits of Warranties.

- a. MELCO does not warrant or guarantee the design, specify, manufacture, construction or installation of the materials, construction criteria, functionality, use, properties or other characteristics of the equipment, systems, or production lines into which the Products may be incorporated, including any safety, fail-safe and shut down systems using the Products.
- b. MELCO is not responsible for determining the suitability of the Products for their intended purpose and use, including determining if the Products provide appropriate safety margins and redundancies for the applications, equipment or systems into which they are incorporated.
- c. Customer acknowledges that qualified and experienced personnel are required to determine the suitability, application, design, construction and proper installation and integration of the Products. MELCO does not supply such personnel.
- d. MELCO is not responsible for designing and conducting tests to determine that the Product functions appropriately and meets application standards and requirements as installed or incorporated into the end-user's equipment, production lines or systems.
- e. MELCO does not warrant any Product:
 - (1) repaired or altered by persons other than MELCO or its authorized engineers or FA Centers;
 - (2) subjected to negligence, carelessness, accident, misuse, or damage;
 - (3) improperly stored, handled, installed or maintained;
 - (4) integrated or used in connection with improperly designed, incompatible or defective hardware or software;
 - (5) that fails because consumable parts were not tested, serviced or replaced;
 - (6) exchange of a consumable part such as batteries, backlights, or fuses;
 - (7) operated or used with equipment, production lines or systems that do not meet applicable and commensurate legal, safety and industry-accepted standards;
 - (8) operated or used in abnormal applications;
 - (9) installed, operated or used in contravention of instructions, precautions or warnings contained in MELCO's user, instruction and/or safety manuals, technical bulletins and guidelines for the Products;
 - (10) used with obsolete technologies or technologies not fully tested and widely accepted and in use at the time of the Product's manufacture;
 - (11) subjected to excessive heat or moisture, abnormal voltages, shock, excessive vibration, physical damage or other improper environment; or
 - (12) damaged or malfunctioning due to Acts of God, fires, acts of vandals, criminals or terrorists, communication or power failures, or any other cause or failure that results from circumstances beyond MELCO's control.
- f. All Product information and specifications contained on MELCO's website and in catalogs, manuals, or technical information materials provided by MELCO are subject to change without prior notice.
- g. The Product information and statements contained on MELCO's website and in catalogs, manuals, technical bulletins or other materials provided by MELCO are provided as a guide for Customer's use. They do not constitute warranties and are not incorporated in the contract of sale for the Products.
- h. These terms and conditions constitute the entire agreement between Customer and MELCO with respect to warranties, remedies and damages and supersede any other understandings, whether written or oral, between the parties. Customer expressly acknowledges that any representations or statements made by MELCO or others concerning the Products outside these terms are not part of the basis of the bargain between the parties and are not factored into the pricing of the Products.
- i. THE WARRANTIES AND REMEDIES SET FORTH IN THESE TERMS ARE THE EXCLUSIVE AND ONLY WARRANTIES AND REMEDIES THAT APPLY TO THE PRODUCTS.
- j. MELCO DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

3. Limits on Damages.

- a. MELCO'S MAXIMUM CUMULATIVE LIABILITY BASED ON ANY CLAIMS FOR BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE, STRICT TORT LIABILITY OR OTHER THEORIES OF RECOVERY REGARDING THE SALE, REPAIR, REPLACEMENT, DELIVERY, PERFORMANCE, CONDITION, SUITABILITY, COMPLIANCE, OR OTHER ASPECTS OF THE PRODUCTS OR THEIR SALE, INSTALLATION OR USE SHALL BE LIMITED TO THE PRICE PAID FOR PRODUCTS NOT AS WARRANTED.
- b. Although MELCO has obtained the certification for Product's compliance to the international safety standards IEC61508 and ISO13849-1 from TUV Rheinland, this fact does not guarantee that Product will be free from any malfunction or failure. The user of this Product shall comply with any and all applicable safety standard, regulation or law and take appropriate safety measures for the system in which the Product is installed or used and shall take the second or third safety measures other than the Product. MELCO is not liable for damages that could have been prevented by compliance with any applicable safety standard, regulation or law.
- c. MELCO prohibits the use of Products with or in any application involving power plants, trains, railway systems, airplanes, airline operations, other transportation systems, amusement equipments, hospitals, medical care, dialysis and life support facilities or equipment, incineration and fuel devices, handling of nuclear or hazardous materials or chemicals, mining and drilling, and other applications where the level of risk to human life, health or property are elevated.
- d. MELCO SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR PUNITIVE DAMAGES, FOR LOSS OF PROFITS, SALES, OR REVENUE, FOR INCREASED LABOR OR OVERHEAD COSTS, FOR DOWNTIME OR LOSS OF PRODUCTION, FOR COST OVERRUNS, OR FOR ENVIRONMENTAL OR POLLUTION DAMAGES OR CLEAN-UP COSTS, WHETHER THE LOSS IS BASED ON CLAIMS FOR BREACH OF CONTRACT OR WARRANTY, VIOLATION OF STATUTE, NEGLIGENCE OR OTHER TORT, STRICT LIABILITY OR OTHERWISE.
- e. In the event that any damages which are asserted against MELCO arising out of or relating to the Products or defects in them, consist of personal injury, wrongful death and/or physical property damages as well as damages of a pecuniary nature, the disclaimers and limitations contained in these terms shall apply to all three types of damages to the fullest extent permitted by law. If, however, the personal injury, wrongful death and/or physical property damages cannot be disclaimed or limited by law or public policy to the extent provided by these terms, then in any such event the disclaimer of and limitations on pecuniary or economic consequential and incidental damages shall nevertheless be enforceable to the fullest extent allowed by law.
- f. In no event shall any cause of action arising out of breach of warranty or otherwise concerning the Products be brought by Customer more than one year after the cause of action accrues.
- g. Each of the limitations on remedies and damages set forth in these terms is separate and independently enforceable, notwithstanding the unenforceability or failure of essential purpose of any warranty, undertaking, damage limitation, other provision of these terms or other terms comprising the contract of sale between Customer and MELCO.

4. Delivery/Force Majeure.

- a. Any delivery date for the Products acknowledged by MELCO is an estimated and not a promised date. MELCO will make all reasonable efforts to meet the delivery schedule set forth in Customer's order or the purchase contract but shall not be liable for failure to do so.
- b. Products stored at the request of Customer or because Customer refuses or delays shipment shall be at the risk and expense of Customer.
- c. MELCO shall not be liable for any damage to or loss of the Products or any delay in or failure to deliver, service, repair or replace the Products arising from shortage of raw materials, failure of suppliers to make timely delivery, labor difficulties of any kind, earthquake, fire, windstorm, flood, theft, criminal or terrorist acts, war, embargoes, governmental acts or rulings, loss or damage or delays in carriage, acts of God, vandals or any other circumstances reasonably beyond MELCO's control.

5. Choice of Law/Jurisdiction.

These terms and any agreement or contract between Customer and MELCO shall be governed by the laws of the State of New York without regard to conflicts of laws. To the extent any action or dispute is not arbitrated, the parties consent to the exclusive jurisdiction and venue of the federal and state courts located in the Southern District of the State of New York. Any judgment there obtained may be enforced in any court of competent jurisdiction.

6. Arbitration.

Any controversy or claim arising out of, or relating to or in connection with the Products, their sale or use or these terms, shall be settled by arbitration conducted in accordance with the Center for Public Resources (CPR) Rules for Non-Administered Arbitration of International Disputes, by a sole arbitrator chosen from the CPR's panels of distinguished neutrals. Judgment upon the award rendered by the Arbitrator shall be final and binding and may be entered by any court having jurisdiction thereof. The place of the arbitration shall be New York City, New York. The language of the arbitration shall be English. The neutral organization designated to perform the functions specified in Rule 6 and Rules 7.7(b), 7.8 and 7.9 shall be the CPR.

Country/Region Sales office/Tel

U.S.A Mitsubishi Electric Automation Inc.
500 Corporate Woods Parkway Vernon
Hills, IL 60061, U.S.A.
Tel : +1-847-478-2100

Brazil MELCO-TEC Rep. Com.e Assessoria
Tecnica Ltda.
Rua Correia Dias, 184,
Edificio Paraiso Trade Center-8 andar
Paraiso, Sao Paulo, SP Brazil
Tel : +55-11-5908-8331

Germany Mitsubishi Electric Europe B.V. German
Branch
Gothaer Strasse 8 D-40880 Ratingen,
GERMANY
Tel : +49-2102-486-0

U.K Mitsubishi Electric Europe B.V. UK
Branch
Travellers Lane, Hatfield, Hertfordshire.,
AL10 8XB, U.K.
Tel : +44-1707-276100

Italy Mitsubishi Electric Europe B.V. Italian
Branch
Centro Dir. Colleoni, Pal. Perseo-Ingr.2
Via Paracelso 12, I-20041 Agrate Brianza.,
Milano, Italy
Tel : +39-039-60531

Spain Mitsubishi Electric Europe B.V. Spanish
Branch
Carretera de Rubi 76-80,
E-08190 Sant Cugat del Valles,
Barcelona, Spain
Tel : +34-93-565-3131

France Mitsubishi Electric Europe B.V. French
Branch
25, Boulevard des Bouvets, F-92741
Nanterre Cedex, France
TEL : +33-1-5568-5568

South Africa Circuit Breaker Industries Ltd.
Private Bag 2016, ZA-1600 Isando,
South Africa
Tel : +27-11-928-2000

Country/Region Sales office/Tel

Hong Kong Mitsubishi Electric Automation
(Hong Kong) Ltd.
10th Floor, Manulife Tower, 169 Electric
Road, North Point, Hong Kong
Tel : +852-2887-8870

China Mitsubishi Electric Automation
(Shanghai) Ltd.
4/F Zhi Fu Plaza, No.80 Xin Chang Road,
Shanghai 200003, China
Tel : +86-21-6120-0808

Taiwan Setsuyo Enterprise Co., Ltd.
6F No.105 Wu-Kung 3rd.Rd, Wu-Ku
Hsiang, Taipei Hsine, Taiwan
Tel : +886-2-2299-2499

Korea Mitsubishi Electric Automation Korea Co., Ltd.
1480-6, Gayang-dong, Gangseo-ku
Seoul 157-200, Korea
Tel : +82-2-3660-9552

Singapore Mitsubishi Electric Asia Pte, Ltd.
307 Alexandra Road #05-01/02, Mitsubishi
Electric Building, Singapore 159943
Tel : +65-6470-2460

Thailand Mitsubishi Electric Automation (Thailand)
Co., Ltd.
Bang-Chan Industrial Estate No.111
Moo 4, Serithai Rd, T.Kannayao,
A.Kannayao, Bangkok 10230 Thailand
Tel : +66-2-517-1326

Indonesia P.T. Autoteknindo Sumber Makmur
Muara Karang Selatan, Block A/Utara
No.1 Kav. No.11 Kawasan Industri
Pergudangan Jakarta - Utara 14440,
P.O.Box 5045 Jakarta, 11050 Indonesia
Tel : +62-21-6630833

India Messung Systems Pvt. Ltd.
Electronic Sadan NO:III Unit No15,
M.I.D.C Bhosari, Pune-411026, India
Tel : +91-20-2712-3130

Australia Mitsubishi Electric Australia Pty. Ltd.
348 Victoria Road, Rydalmere,
N.S.W 2116, Australia
Tel : +61-2-9684-7777

**AMITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS : 1-14, YADA-MINAMI 5-CHOME, HIGASHI-KU, NAGOYA, JAPAN

When exported from Japan, this manual does not require application to the Ministry
of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.